


Engine Stand Axle Adapter Assembly

Adjust engine stand to accept Rear Axle Service Support.
Adjust width to accommodate differential housing.

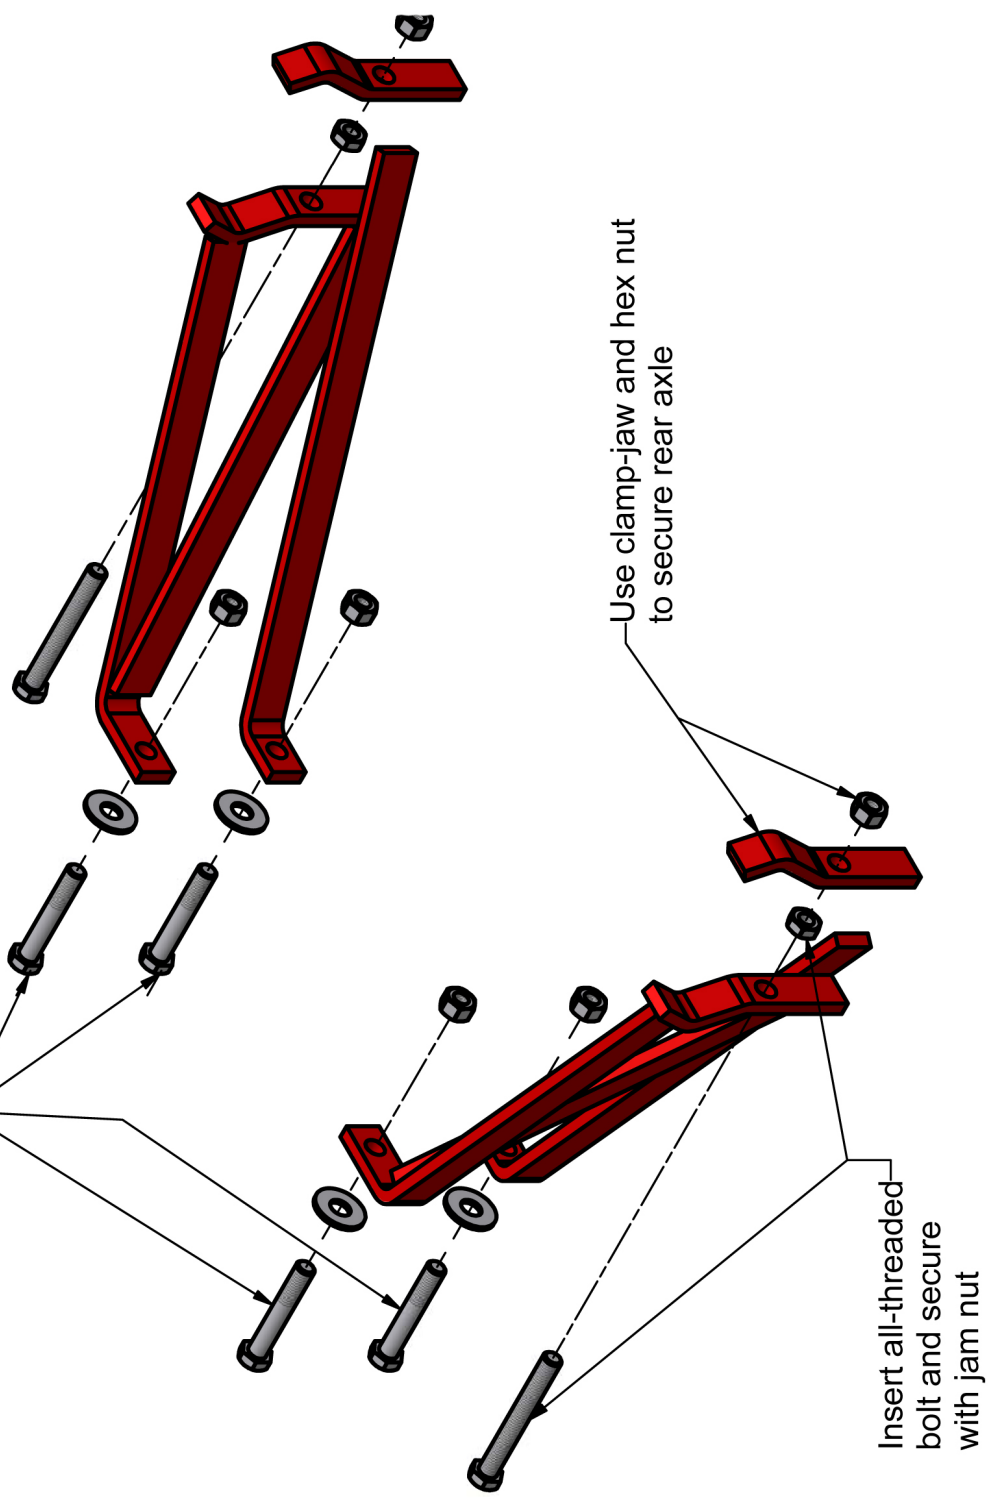

STOP
IF FOR ANY REASON PARTS ARE MISSING DUE TO SHIPPING
PLEASE CALL: 1-800-568-7423 EXT 188