




## Wheel Rack Assembly

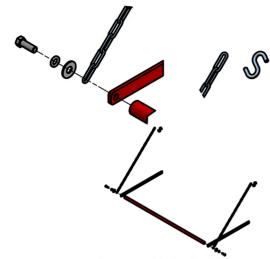

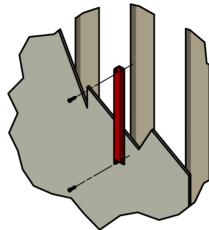


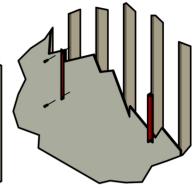


Pre-assemble the Rod, Arms and Chains as shown.


Locate a stud in the wall where you want to mount the Tire Rack. Attach right Frame as shown.

Measure over 48" from the center of the right Frame. This will be the center of the left Frame. Measure from the floor to the right Frame and put a mark on the wall at the same dimension for the left Frame as shown. Note, the legs are facing each other and measure 46-1/2" between them.

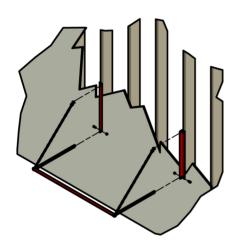

Attach pre-assembled Rod and Arms to the right and left Frames as shown.

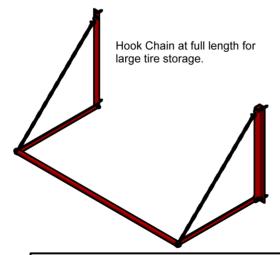

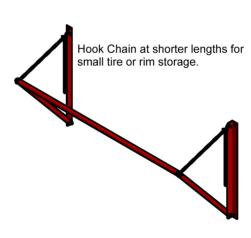



## STOP

- 1. DO NOT OVER-TIGHTEN BOLTS! DOING SO MIGHT STRIP THREADS FROM STUD!
- 2. IF FOR ANY REASON PARTS ARE MISSING DUE TO SHIPPING PLEASE CALL: 1-800-568-7423 EXT 188