


Merrick Originals

Jack Stand Hanger

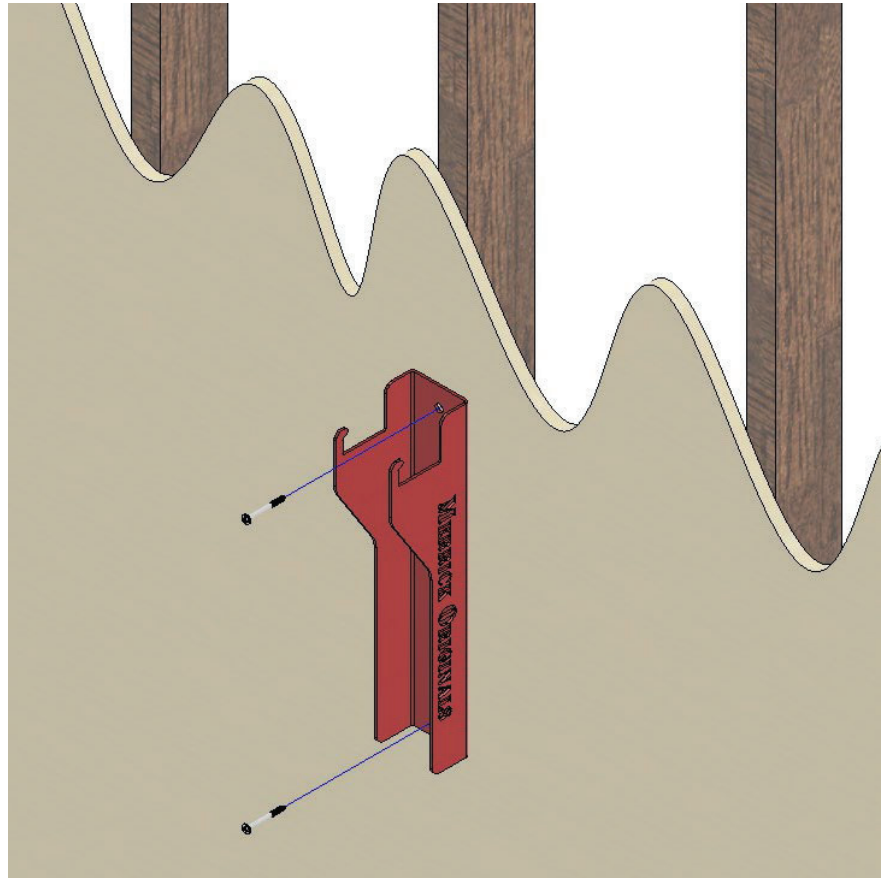

Locate stud behind the wall. Center the mounting holes on the stud and install the provided screws. Tighten both screws until tool holder is snug to wall.

(2) Screws are provided = PN: M270773-1

STOP

- 1. DO NOT OVER-TIGHTEN SCREWS! DOING SO MIGHT STRIP THREADS FROM STUD!**
- 2. IF FOR ANY REASON PARTS ARE MISSING DUE TO SHIPPING PLEASE CALL: 1-800-568-7423 EXT 188**