


# Merrick Originals

## Wrench Rack

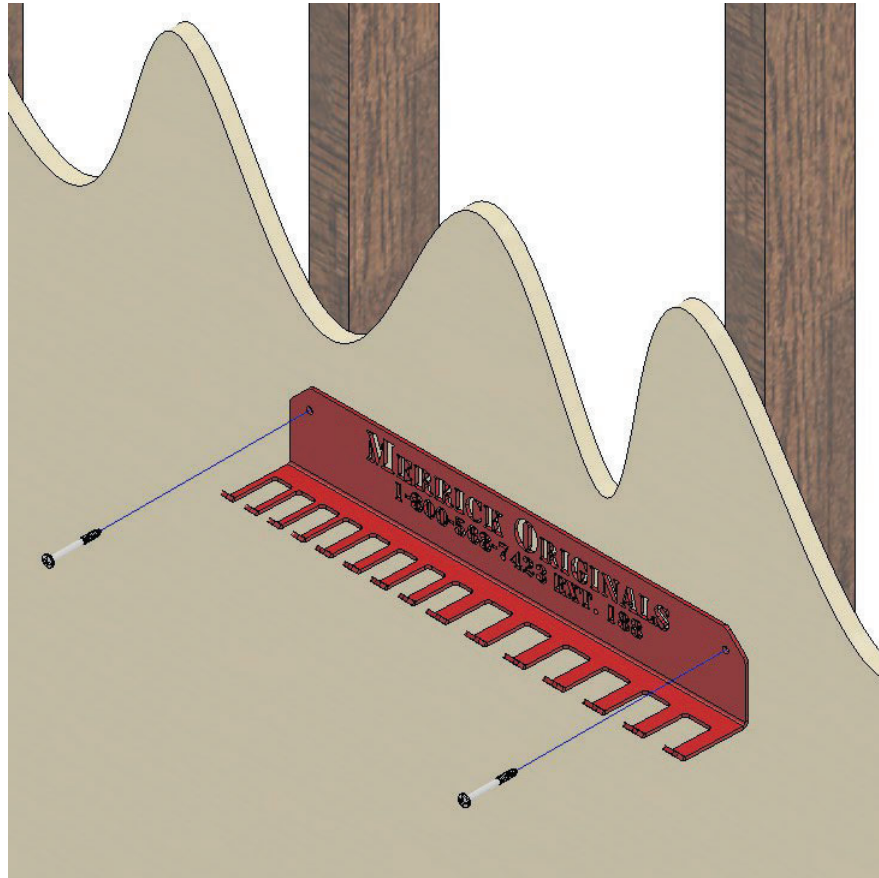

Locate stud behind the wall. Center one of the mounting holes on the stud and install one of the provided screws, do not tighten yet. Rotate the tool rack until level. Install the other screw into the mounting hole. Tighten both screws until tool holder is snug to wall.

(2) Screws are provided = PN: M270773-1

### **STOP**

- 1. DO NOT OVER-TIGHTEN SCREWS! DOING SO MIGHT STRIP THREADS FROM STUD!**
- 2. IF FOR ANY REASON PARTS ARE MISSING DUE TO SHIPPING PLEASE CALL: 1-800-568-7423 EXT 188**